Accessories



APSM Accessory Pump Slave Module

Installation, Operation & Maintenance Instructions
97B0041N01
Revision 10/14/05

TABLE OF CONTENTS

Description 2
Wiring Diagram 2
Connections 2

The pump slaving module is designed to allow two units to share one Flow Controller. The module is mounted in a NEMA enclosure, which is designed to be mounted on the Flow Controller or on the outside of the unit. Wire the pumps and units as shown below in instructions that are shipped with the relay board. A picture of the module is shown for reference at the right.



