

PRO¹ T721

Pro1 Technologies, Inc.

1111 S. Glenstone Ave., Suite 2-100
Springfield, MO 65804

Toll-Free: 888-776-1427 Web: www.pro1iaq.com

Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Warranty Registration	4




Caution:

Equipment damage hazard
Do not operate the cooling system if the outdoor temperature is below 50 °F (10° C) to prevent possible compressor damage.


Una versión en español de este manual se puede descargar en la página web de la compañía.

OPERATING MANUAL THERMOSTAT QUICK REFERENCE

Getting to know your thermostat

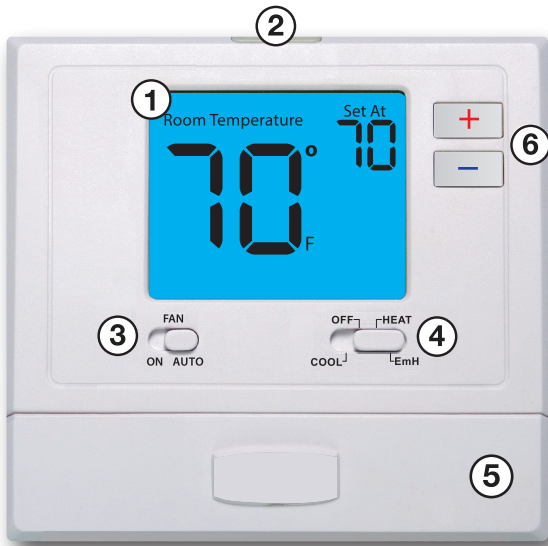

① LCD

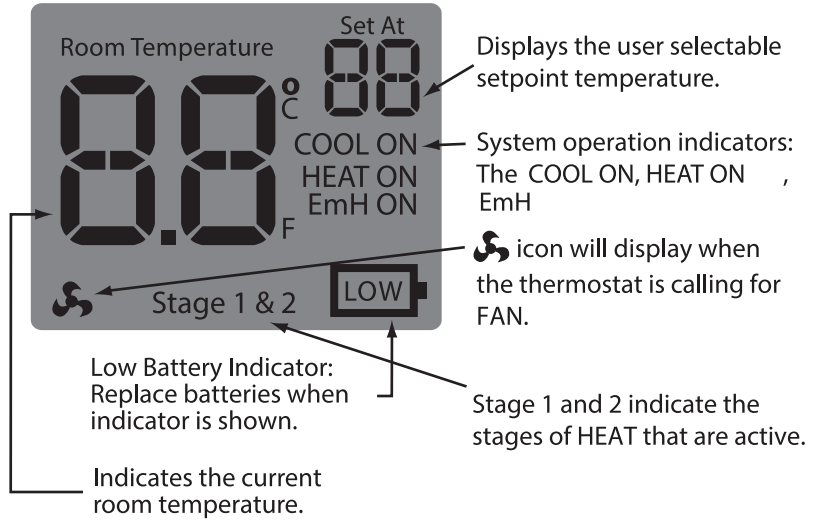


- ② Glow in the Dark Light Button
- ③ Fan Switch
- ④ System Switch
- ⑤ Easy Change Battery Door
- ⑥ Temperature Setpoint Buttons



Important:


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the set points will change to 55°F(Heating) and 85°F(Cooling). If the user adjusts these setpoints away from these it will hold for 4 hours then return to either 55°F or 85°F. After day 84 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the battery is changed.

Battery door information

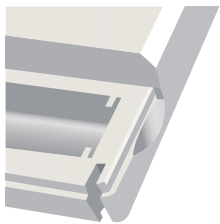


Use the finger bevel on the lower portion of the side of the thermostat to open the easy access battery door.


Insert 2 AA Alkaline batteries (included). High quality alkaline batteries are recommended.

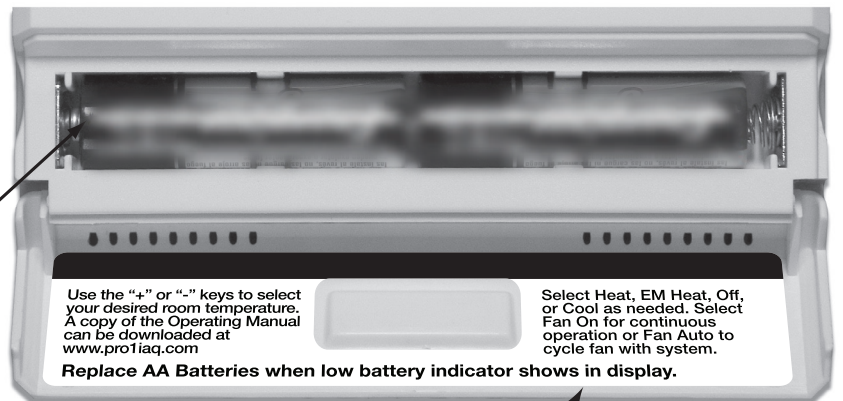



Simple operating instructions are found on the back of the battery door.

Easy to use controls

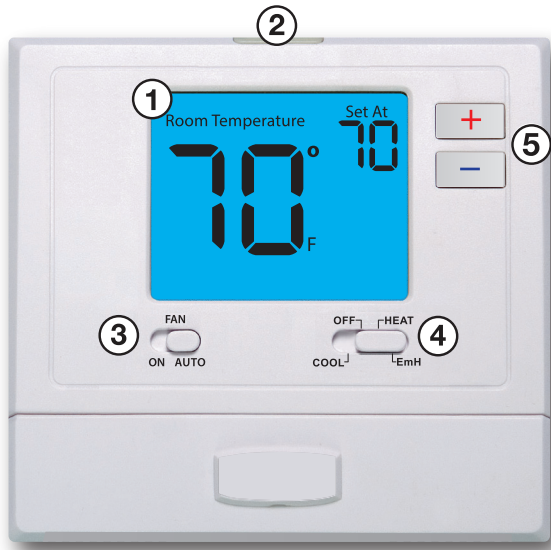

 Caution: When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- ① **LCD Display:**
See page 2 for details about this display read out.
- ② **Glow in the Dark Light Button:**
The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.
- ③ **Fan Switch:**
Select ON or AUTO . ON will run the fan continuously. AUTO will cycle the fan on only when the heating or cooling system is on.
- ④ **System Switch:**
Selects the operation mode of your HVAC system. Selecting HEAT turns on the heat mode. Selecting COOL turns on the air conditioning mode. Selecting OFF turns both heating and cooling off. Selecting EmH locks out your compressor and turns on the secondary heat mode.
- ⑤ **Temperature Setpoint Buttons:**
Press the  or  buttons to select the desired room temperature.

Understanding Thermostat Staging

Your thermostat will control two stages of heating. The thermostat will try to maintain your comfort setting using the first stage for energy efficiency. The second stage of heating will only be used if your thermostat cannot maintain your comfort setting using only one stage. When the second stage is used you will see stage 2 in the display.

Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

- ① Go to the company website , select warranty registration and fill out a short registration form.
- or -
- ② Complete the form below and mail it to the address shown.



Warranty Registration:

Name: _____

Address: _____

City: _____

State: _____

Zip: _____

Thermostat Model: _____

Date Installed: _____

Complete form and mail to:

Thermostat Warranty Registration

1111 S. Glenstone

Suite 2-100

Springfield, MO 65804