

# INSTALLATION INSTRUCTIONS

## SIG1100--FURNACE IGNITER

The SIG1100 is a silicone carbide round igniter is designed to replace over 170 igniters.

Specifications:

Voltage: 120 vac

Cold Resistance: 440-100 ohms @ 75°F±10°F

1. Disconnect power.
2. Disconnect igniter wires from furnace.
3. Remove screw holding igniter.
4. Determine which bracket configuration is needed and attach the new igniter with screw.
5. Reconnect wires to furnace.
6. Reconnect power.
7. Adjust heat and make sure the furnace turns on and cycles properly.



Disconnect power before servicing equipment.

**800.333.9125 - techsupport@supco.com - www.supco.com**