



## SRL-Series Manual Roll-Out Switch

The SRL-Series style temperature controls have a bi-metal disc that senses the temperature and quickly separates the contacts. This results in long life characteristics at loads up to 10 amps at 250 VAC. SRL-Series switches are single pole single throw 36T15 style (1/2") with manual-reset. These switches are designed to open on temperature rise. The SRL-Series roll-out switch activates when the furnace heats to a predetermined high temperature limit. Once the flame roll-out switch has been tripped, the furnace will turn off and remain off until the SRL switch reset button is pressed.

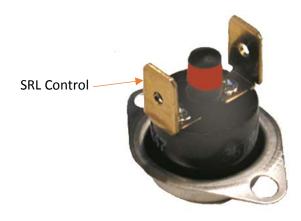

Part No.	Open °F	Close	
SRL130	130	Manual	
SRL135	135	Manual	
SRL220	220	Manual	
SRL230	230	Manual	
SRL240	240	Manual	
SRL250	250	Manual	
SRL260	260	Manual	
SRL300	300	Manual	
SRL350	350	Manual	

## Air Stream Mounting

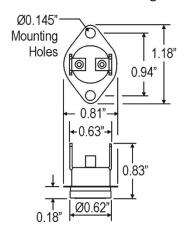

Contact Arrangement	FLA	LRA	Pilot Duty VA	Resistive Amps	Voltage AC
1 & 3 SPST	3	12	125	15	120
1 & 3 SPST	1.5	6	125	10	240

800-333-9125 SUPCO.COM





