

## User Manual



## Universal Smart Wi-Fi Thermostat

*This manual covers the following thermostat model:*

**8205** Up to 3 Heat / 2 Cool Heat Pump  
Up to 2 Heat / 2 Cool Conventional

*See Wi-Fi Setup Guide for Wi-Fi Setup Instructions*

***Read all instructions before proceeding.***

**Store this manual for future reference**

# Contents

<b>1 About Your Thermostat</b>	
Quick Reference.....	4
<b>2 User Settings</b>	
Accessing User Settings .....	8
Table of User Settings .....	9
Resetting Service Reminders .....	9
Setting the Time and Day .....	9
Service Filter Reminder .....	10
Temperature & Lock Code .....	10
Resetting Thermostat .....	11
<b>3 Setting Your Program Schedule</b>	
Tips Before Setting Your Program Schedule .....	12
Default Energy Saving Programs.....	13
Programming a 7 Day Schedule .....	14
Programming a 5-2 Day Schedule .....	16
<b>4 Operating Your Thermostat</b>	
Setting the System Control Mode .....	17
Setting the Fan Control Mode .....	18
Temperature Adjustment .....	19
Program Event Indicators .....	19
System Status and Maintenance Indicators .....	20
<b>5 Additional Operation Features</b>	
Auto Changeover Mode .....	23
Adaptive Recovery Mode .....	23
Circulating Fan Mode .....	24
Compressor Protection .....	24
Locking and Unlocking the Thermostat .....	25
Wi-Fi Connection .....	26
<b>6 Thermostat Maintenance</b>	
Battery Replacement .....	27
Thermostat Cleaning .....	27

## Regulatory Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:


- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exempts de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Ce dispositif ne peut causer des interférences ; et
- (2) Ce dispositif doit accepter toute interférence , y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

# 1 About Your Thermostat

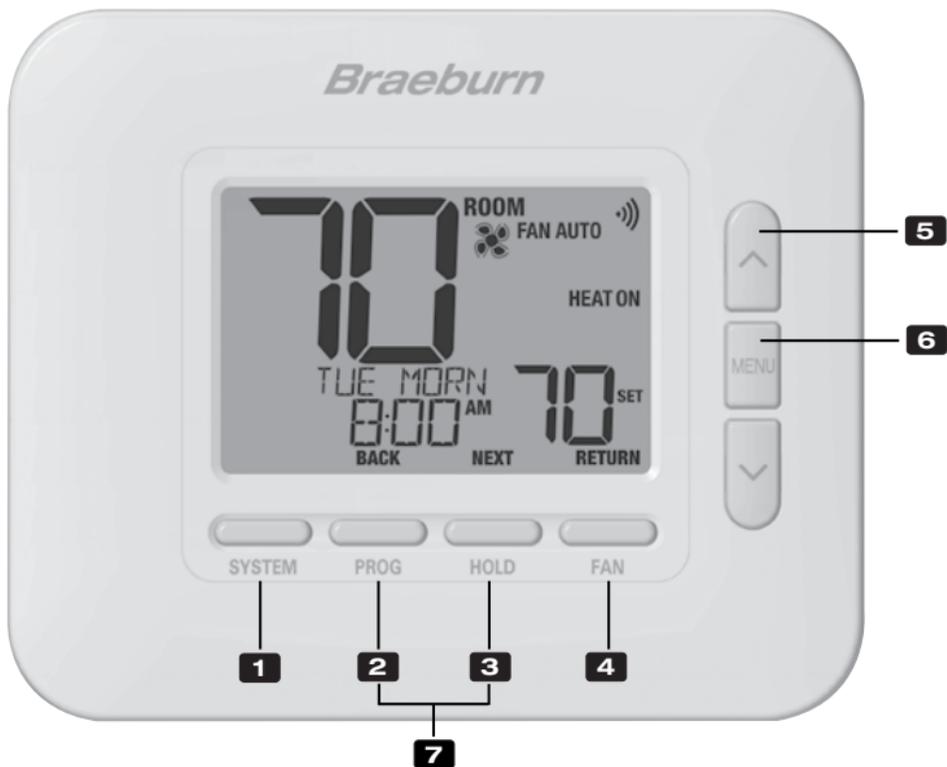


# Thermostat

- 1** **SYSTEM Button** .....Selects the system you want to control
  - 2** **PROG Button** .....Enters programming mode or hold for 3 seconds to enter SpeedSet® mode
  - BACK Button\*** .....Secondary function of the **PROG** button - Moves to previous setting
  - 3** **HOLD Button** .....Enters / Exits **HOLD** mode (program bypass mode)
  - NEXT Button\*** .....Secondary function of the **HOLD** button - Moves to next setting
  - 4** **FAN Button** .....Selects the system fan mode
  - RETURN Button\*** .....Secondary function of the **FAN** button - Exits program or settings modes
  - 5** **Up / Down Arrow Buttons**.....Increases or decreases settings (time, temperature, etc.)
  - 6** **MENU Button** .....Used to access user settings mode
  - 7** **Lock / Unlock Thermostat** ....Access user Lock / Unlock screen by holding **PROG** and **HOLD** together for 5 seconds
- Battery Compartment** ..... Located on the back side of thermostat (if installed)

\* **BACK**, **NEXT** and **RETURN** are secondary functions of the **PROG**, **HOLD** and **FAN** buttons. When in programming or configuration modes, **BACK**, **NEXT** and **RETURN** appear in the display screen indicating that the **PROG**, **HOLD** and **FAN** buttons now function as **BACK**, **NEXT** and **RETURN**.

# 1 About Your Thermostat

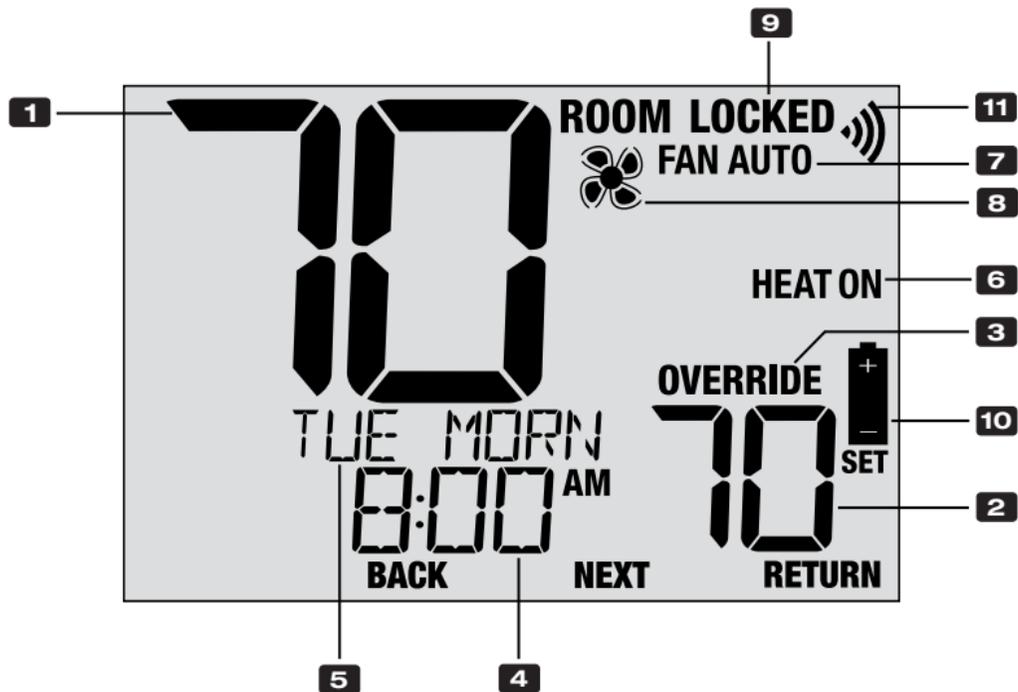

# Thermostat Display

- 1 Room Temperature** .....Displays the current room temperature
- 2 Set Temperature** ..... Displays the current setpoint temperature
- 3 Override Indicator** .....Indicates that the current program schedule has been temporarily overridden
- 4 Time of Day** .....Displays the current time of day
- 5 Message Center** .....Displays various thermostat status and maintenance information
- 6 System Mode** .....Displays the system mode and current system status
- 7 Fan Mode Indicator**.....Indicates the current system fan mode
- 8 Fan Status Indicator** .....Indicates that the system fan is running
- 9 Lock Mode Indicator**.....Indicates if the thermostat is locked
- 10 Low Battery Indicator**.....Indicates when the batteries need to be replaced
- 11 Wi-Fi Indicator** ..... Indicates the status of the wi-fi connection

## 2 User Settings

User Settings allow you set the current time of day as well as customize various thermostat features.

### To Enter User Settings Menu

1. Press and release the **MENU** button
2. Use the **▲** or **▼** buttons to select **OPTIONS SET**
3. Press **NEXT** (HOLD) to confirm this choice and enter the User Settings Menu

### To Navigate the User Settings Menu

4. Press **NEXT** (HOLD) or **BACK** (PROG) to move to the next or previous setting
5. Use the **▲** or **▼** buttons to change the selection for each setting.
6. Press **RETURN** (FAN) to exit or wait 30 seconds



## Table of User Settings

**NOTE:** Some user settings may not be available, depending on how the thermostat was configured during installation.

No.	User Setting	Displayed	Default Setting	Available Settings	Description of Available Settings
1	Reset FILTER	RESET / FILTER	NO	NO	Select to keep message displayed
				YES	Select to remove message and reset timer
				<b>[Only appears if the service filter time interval has expired]</b> If a service filter time interval was selected in setting 5, the thermostat will display a SERVICE FILTER message once that time interval is reached. Select NO to keep the message displayed or select YES to clear the message and reset the timer.	
2	Current Time of Day (Hour)	SET TIME	12:00	1-12	Select the current hour of day
					Set the current hour of the day. If thermostat was configured for a 24-hour clock, the settings 0-24 will be available. If the thermostat was configured for a 12-hour clock, this is also how you will select between a.m. and p.m.
3	Current Time of Day (Minute)	SET TIME	12:00	00-60	Select the current minute of the hour
					Set the current minute of the hour.
4	Current Day of Week	SET DAY	MON	MON-SUN	Select the current day of the week
					Set the current day of the week.

*Continued on next page*

## Table of User Settings *(cont.)*

No.	User Setting	Displayed	Default Setting	Available Settings	Description of Available Settings
5	Service Filter Timer	FILTER	OFF	OFF	Service filter timer is disabled
				30, 60, 90, 120, 180, 365	Select number of days for service filter timer
Select the number of days before receiving a reminder to change your system filter (if applicable). When the timer interval has expired, the thermostat will display SERVICE FILTER. To reset this reminder, see setting 1. To disable, select OFF.					
6	Temperature Hold Time (HOLD Button)	HOLD	LONG	LONG	Select for long (permanent) HOLD mode
				24HR	Select for 24 hour (temporary) HOLD mode
<b>[Only available if programming is enabled]</b> Temperature Hold Time lets you select the time that your thermostat will hold the temperature when the HOLD button has been pressed. When LONG is selected, the thermostat will hold your temperature indefinitely. When 24HR is selected, the thermostat will hold your temperature for 24 hours and then return to the current program temperature.					
7	Thermostat Lock Code	SET LOCK	000	0-9	Select a 3-digit lock code of 0-9 for each digit
				The Thermostat Lock Code sets a 3-digit code that you may use at any time to lock or unlock the thermostat keypad. Setting the 3-digit code does not activate the lock feature. To lock or unlock the thermostat, see Locking/Unlocking Thermostat, section 5. The lock code 000 cannot be used.	

*Continued on next page*

## Table of User Settings *(cont.)*

No.	User Setting	Displayed	Default Setting	Available Settings	Description of Available Settings
8	User Reset	RESET	NO	NO	Reset disabled - no changes made
				YES	Reset enabled - resets thermostat
Selecting YES will reset all user settings, program and current time. Thermostat lock code and Installer Settings will not be affected.					

**NOTE:** *This reset will not affect the lock code, wireless connection of the thermostat and/or any connected remote sensors. If you wish to reset the wireless connection, please refer to the wireless setup guide.*

**An additional Table of Wi-Fi Settings is available. Please refer to the Wi-Fi Setup Guide.**


### 3 Setting Your Program Schedule

#### Tips Before Setting Your Program Schedule

- Make sure your current time and day of the week are set correctly.
- Make sure the AM and PM indicators are correct.
- Various installer settings such as auto changeover mode and temperature adjustment limits may affect your programming flexibility.
- Your NITE event cannot exceed 11:50 p.m.
- **BACK**, **NEXT** and **RETURN** are secondary functions of the **PROG**, **HOLD** and **FAN** buttons.

#### This thermostat has been configured with one of the following programming options:

- 7-day programming mode with 4 events per day
- 5-2 (weekday/weekend) programming mode with 4 events per day
- Non-Programmable mode

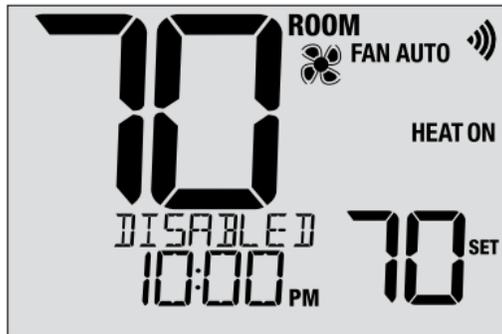

**NOTE:** If this thermostat was configured to be non-programmable, then you cannot set a program schedule. If you press the **PROG** or **HOLD** buttons, the word “DISABLED” will appear in the display.

## Default Energy Saving Programs

This thermostat comes pre-programmed with a default energy saving program. The following tables outline the pre-programmed times and temperatures for heating and cooling in each of your 4 daily events (2 events if configured for commercial mode). If you wish to use these settings, then no further programming is necessary:

<b>7 Day Programming</b> <i>Factory Settings</i>		<b>5-2 Day Programming</b> <i>Weekday/Weekend Factory Settings</i>	
<b>4 Event</b>	<b>All Days</b>	<b>Weekday</b>	<b>Weekend</b>
<b>MORN</b>	Time: 6:00 am Heat: 70° F (21° C) Cool: 78° F (26° C)	Time: 6:00 am Heat: 70° F (21° C) Cool: 78° F (26° C)	Time: 6:00 am Heat: 70° F (21° C) Cool: 78° F (26° C)
<b>DAY</b>	Time: 8:00 am Heat: 62° F (17° C) Cool: 85° F (29° C)	Time: 8:00 am Heat: 62° F (17° C) Cool: 85° F (29° C)	Time: 8:00 am Heat: 62° F (17° C) Cool: 85° F (29° C)
<b>EVE</b>	Time: 6:00 pm Heat: 70° F (21° C) Cool: 78° F (26° C)	Time: 6:00 pm Heat: 70° F (21° C) Cool: 78° F (26° C)	Time: 6:00 pm Heat: 70° F (21° C) Cool: 78° F (26° C)
<b>NITE</b>	Time: 10:00 pm Heat: 62° F (17° C) Cool: 82° F (28° C)	Time: 10:00 pm Heat: 62° F (17° C) Cool: 82° F (28° C)	Time: 10:00 pm Heat: 62° F (17° C) Cool: 82° F (28° C)

## Setting a 7-Day program – All 7 Days at Once (SpeedSet®)


(7-day programming mode only)

**NOTE:** Setting all 7 days at once will copy over any previously programmed individual days.

### Available Daily Events

#### MORN, DAY, EVE, NITE

1. Hold the **PROG** button for 3 seconds until ALL DAYS appears.
2. Press **SYSTEM** to select HEAT or COOL. Press **NEXT**.
3. Press **▲** or **▼** to adjust the hour for the first event. Press **NEXT**.
4. Press **▲** or **▼** to adjust the minute for the first event. Press **NEXT**.
5. Press **▲** or **▼** to adjust the temp for the first event. Press **NEXT**.
6. Repeat steps 3-5 for the remaining daily events.
7. If needed, repeat steps 2-6 to program the opposite mode.
8. Press **RETURN** to exit.

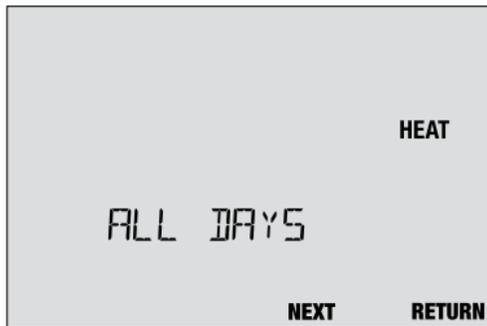


## Setting a 7-Day program – Individual Days

(7-day programming mode only)

### Available Daily Events: MORN, DAY, EVE, NITE

1. Press and release the **PROG** button.
2. Press **SYSTEM** to select HEAT or COOL.
3. Press **▲** or **▼** to select the day you want to program. Press **NEXT**.
4. Press **▲** or **▼** to adjust the hour for the first event. Press **NEXT**.
5. Press **▲** or **▼** to adjust the minute for the first event. Press **NEXT**.
6. Press **▲** or **▼** to adjust the temp for the first event. Press **NEXT**.
7. Repeat steps 4-6 for your remaining daily events.
8. If needed, repeat steps 3-7 to program additional days.
9. If needed, repeat steps 2-8 to program the opposite mode.
10. Press **RETURN** to exit.

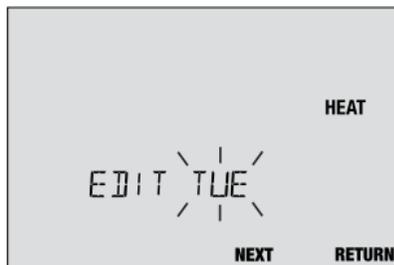

## Setting a 5-2 Day Weekday/Weekend Program

(5-2 day programming mode only)

### Available Daily Events: MORN, DAY, EVE, NITE

1. Press and release the **PROG** button.
2. Press **SYSTEM** to select HEAT or COOL.
3. Press **▲** or **▼** to select WEEKDAYS or WEEKEND. Press **NEXT**.
4. Press **▲** or **▼** to adjust the hour for the first event. Press **NEXT**.
5. Press **▲** or **▼** to adjust the minute for the first event. Press **NEXT**.
6. Press **▲** or **▼** to adjust the temp for the first event. Press **NEXT**.
7. Repeat steps 4-6 for your remaining daily events.
8. If needed, repeat steps 3-7 to program additional days.
9. If needed, repeat steps 2-8 to program the opposite mode.
10. Press **RETURN** to exit.



## 4 Operating Your Thermostat

### Setting the SYSTEM Control Mode

The System Control has 5 modes of operation – OFF, HEAT, EMR HEAT, AUTO and COOL. The mode can be selected by pressing the **SYSTEM** button to scroll through the different system modes.

**NOTE:** Depending on how your thermostat was configured, some system modes may not be available.

**OFF** Heating and cooling systems are off.

**HEAT** Only your heating system will operate

**EMERGENCY** Operates a backup heat source

**HEAT (EMR HEAT)** (Emergency Heat) for heat pump systems only.

**AUTO** The system will cycle between heating and cooling automatically based on your temperature set points. AUTO will be displayed with either HEAT or COOL.

**COOL** Only your cooling system will operate.



## Setting the FAN Control Mode

The Fan Control has 3 modes of operation – AUTO, ON, CIRC. The mode can be selected by pressing the **FAN** button to scroll through the different fan modes.

**NOTE:** Depending on how your thermostat was configured, some fan modes may not be available.

**AUTO** The system fan will run only when your heating or cooling system is running.

**ON** The system fan stays on.

**CIRC** The system fan will run from time to time to help circulate air and provide more even temperature when the heating or cooling system is not active.



## Temperature Adjustment

**Temporary Adjustment (OVERRIDE)** – Press **▲** or **▼** to adjust the current set temperature. The set temperature will change back to your programmed temperature a few hours later or at the start of the next scheduled program event. **OVERRIDE** will appear in the display during the entire override period.

**Extended Adjustment (HOLD)** – Press the **HOLD** button to override all programming. You can continue to use the **▲** or **▼** buttons to adjust the current set temperature. Press **HOLD** again to resume the program schedule. You can limit your hold time to 24-hours by adjusting User Setting 6 in section 2.

**NOTE:** If your thermostat was configured to be non-programmable, **HOLD** and **OVERRIDE** are not available.

## Program Event Indicators (MORN, DAY, EVE, NITE)

Program event indicators appear in the display to let you know what part of your current program is active.

**NOTE:** If your thermostat was configured to be non-programmable, or is in **HOLD** mode, you will not see a Program Event or **OVERRIDE** indicator.



## System Status and Maintenance Indicators

Status indicators are messages or symbols that appear in the display to let you know what function your system is currently performing. They are also used to inform you of various service and maintenance functions.

**HEAT ON** The heating system is running.


**COOL ON** The cooling system is running.

**HEAT ON AUX** The auxiliary stage of heating is running (multistage systems only).

**EMERGENCY HEAT ON** The emergency heating system is running (heat pump systems only).






Indicates that the system fan is running.

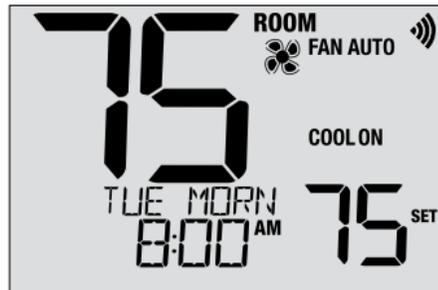

## System Status and Maintenance Indicators *(continued)*

- HIGH LIM** Setpoint temperature has reached its upper limit maximum.
- LOW LIM** Setpoint temperature has reached its lower limit maximum.
- HI TEMP** Room temperature has risen above the display range. Cooling will still operate to help lower temperature.
- LO TEMP** Room temperature has fallen below the display range. Heat will still operate to help raise temperature.
- CHANGE BATTERY** If batteries are installed and they become low, the battery symbol appears in the display. When the batteries become critically low, the battery symbol will flash, and CHANGE / BATTERY will alternate in the display (see “Changing the Batteries” in section 6).

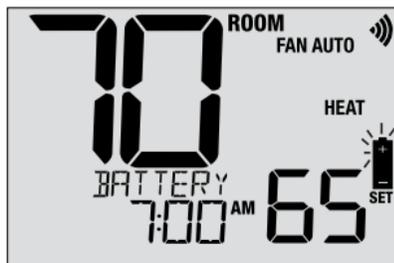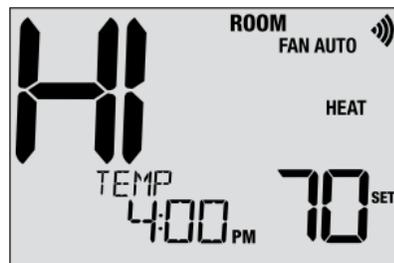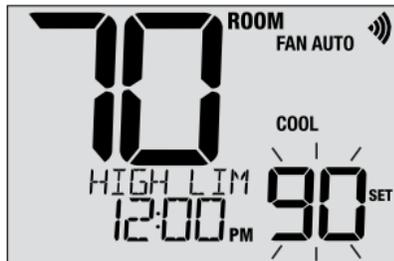

## System Status and Maintenance Indicators *(continued)*



**LOCKED** Thermostat has been fully or partially locked.  
See Locking and Unlocking thermostat, section 5.

**SERVICE** A user selectable service reminder for changing the filter has been triggered. To set or reset these reminders, see User Options, section 2.

**NO POWER** AC power to thermostat has been lost. Only available if thermostat is hardwired and thermostat is configured for power monitoring.



A flashing Wi-Fi icon indicates the Wi-Fi network connection has been interrupted. Usually this connection will re-establish when the network is available. If it does not, see the Wi-Fi Setup Guide for further instructions.

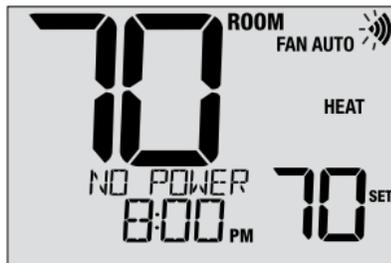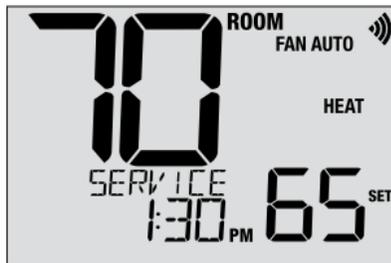

## 5 Additional Operating Features

### Auto Changeover Mode

When Auto Changeover mode is enabled and selected, the system automatically switches between heating and cooling when the room temperature meets the current heating or cooling set points. To operate properly, the thermostat maintains a forced separation between the heating and cooling setpoints to prevent these systems from working against each other. If a setting is made in either heating or cooling which violates the forced separation, the opposite mode will adjust up or down accordingly to maintain the current forced separation.

Select Auto Changeover Mode by pressing the SYSTEM button until AUTO HEAT or AUTO COOL appears in the display. Whichever system was running last will remain in the display until the opposite system runs.

### Adaptive Recovery Mode (ARM™)

If enabled, Adaptive Recovery Mode attempts to achieve your desired heating or cooling temperature at the time you have set in your current program schedule, after a setback period. For example, if you set your heat down to 62° at night and have a set point of 70° scheduled for 7:00 AM, the thermostat may turn on your heating system early in order to achieve a temperature of 70° by 7:00 AM.

This feature does not operate when the thermostat is in HOLD mode; if the program is temporarily overridden or if emergency heat is selected on a multistage heat pump system.



## Circulating Fan Mode

Circulating Fan Mode is selected by touching the FAN button until CIRC appears in the display. When in CIRC mode the fan operates as required by the heating and cooling system (just like AUTO mode). When heating or cooling is not active, fan will run as needed to ensure a 35% minimum run time.



## Compressor Protection

This thermostat includes an automatic compressor protection delay to avoid potential damage to your system from short cycling. This feature activates a short delay after turning off the system compressor.

Additionally, for multistage heat pump systems, this thermostat provides cold weather compressor protection by locking out the compressor stage(s) of heating for a period of time after a power outage greater than 60 minutes. During this lockout period, the thermostat will operate the auxiliary stage of heating.

## Locking and Unlocking the Thermostat

Your 3-digit Lock Code is set in the User Settings portion of this manual (section 2). Once the code is set, the thermostat can be locked or unlocked at any time by entering that code.

To lock or unlock the thermostat, press and hold the **PROG** and **HOLD** buttons together for 5 seconds. While holding these buttons, LOCK will flash in the display (Figure 1).

The screen will change displaying LOCK CODE 000 (Figure 2). Press **▲** or **▼** to enter the first digit of your lock code and then press the **NEXT** button to advance to the next digit. Repeat this process to enter the second and third digit of your lock code. After entering the third digit, press **NEXT** to advance to the next User Setting or **RETURN** to exit.

If you entered a valid code, the thermostat will be locked or unlocked (depending on its previous state). When locked, the word LOCKED appears in the display (Figure 3). If an invalid code is entered, WRONG CODE will briefly appear in the display.



Figure 1



Figure 2



Figure 3

## Wi-Fi Connection

This thermostat is capable of connecting to a Wi-Fi network to enable remote monitoring and control from a mobile device or PC.



To connect to Wi-Fi, you'll need the BlueLink Smart Connect® application on an iOS or Android™ device. The BlueLink Smart Connect Application is FREE to download and use. The application will guide you through account registration and thermostat connection.



For additional instructions on connecting your thermostat, see the Wi-Fi Setup Guide.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google and Google Play are trademarks of Google LLC.

## 6 Thermostat Maintenance

### Changing the Batteries

Depending on your installation, this thermostat may be equipped with two (2) “AA” type alkaline batteries.

If batteries are installed and they become low, the battery symbol appears in the display. When the batteries become critically low, the battery symbol will flash, and CHANGE / BATTERY will alternate in the display.



#### To change your batteries:

1. Remove thermostat body by gently pulling it from base.
2. Remove old batteries and replace with new batteries.
3. Make sure to correctly position the (+) and (-) symbols.
4. Gently push thermostat body back onto base.

**NOTE:** We recommend replacing the thermostat batteries annually or if the thermostat will be unattended for an extended period of time.

### Thermostat Cleaning

Never spray any liquid directly on the thermostat. Spray your cleaning liquid on a soft cloth and then proceed to clean the screen with the damp cloth. Only use water or household glass cleaner. Never use any abrasive cleansers to clean your thermostat.

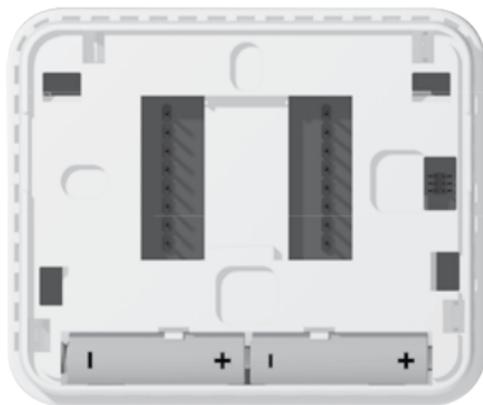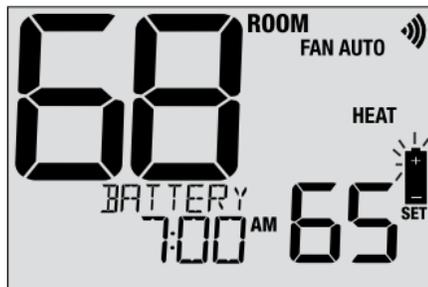

***For more information, visit [www.braeburnonline.com](http://www.braeburnonline.com)***

## **Limited Warranty**

When installed by a professional contractor, this product is backed by a 5 year limited warranty. Limitations apply. For limitations, terms and conditions, you may obtain a full copy of this warranty. Visit us online: [www.braeburnonline.com/warranty](http://www.braeburnonline.com/warranty), phone us: 866.268.5599 or write us: Braeburn Systems LLC, 2215 Cornell Avenue, Montgomery, IL 60538.



Braeburn Systems LLC  
2215 Cornell Avenue • Montgomery, IL 60538  
Technical Assistance: [www.braeburnonline.com](http://www.braeburnonline.com)  
Call us toll-free: 866-268-5599 (U.S.)  
630-844-1968 (Outside the U.S.)